


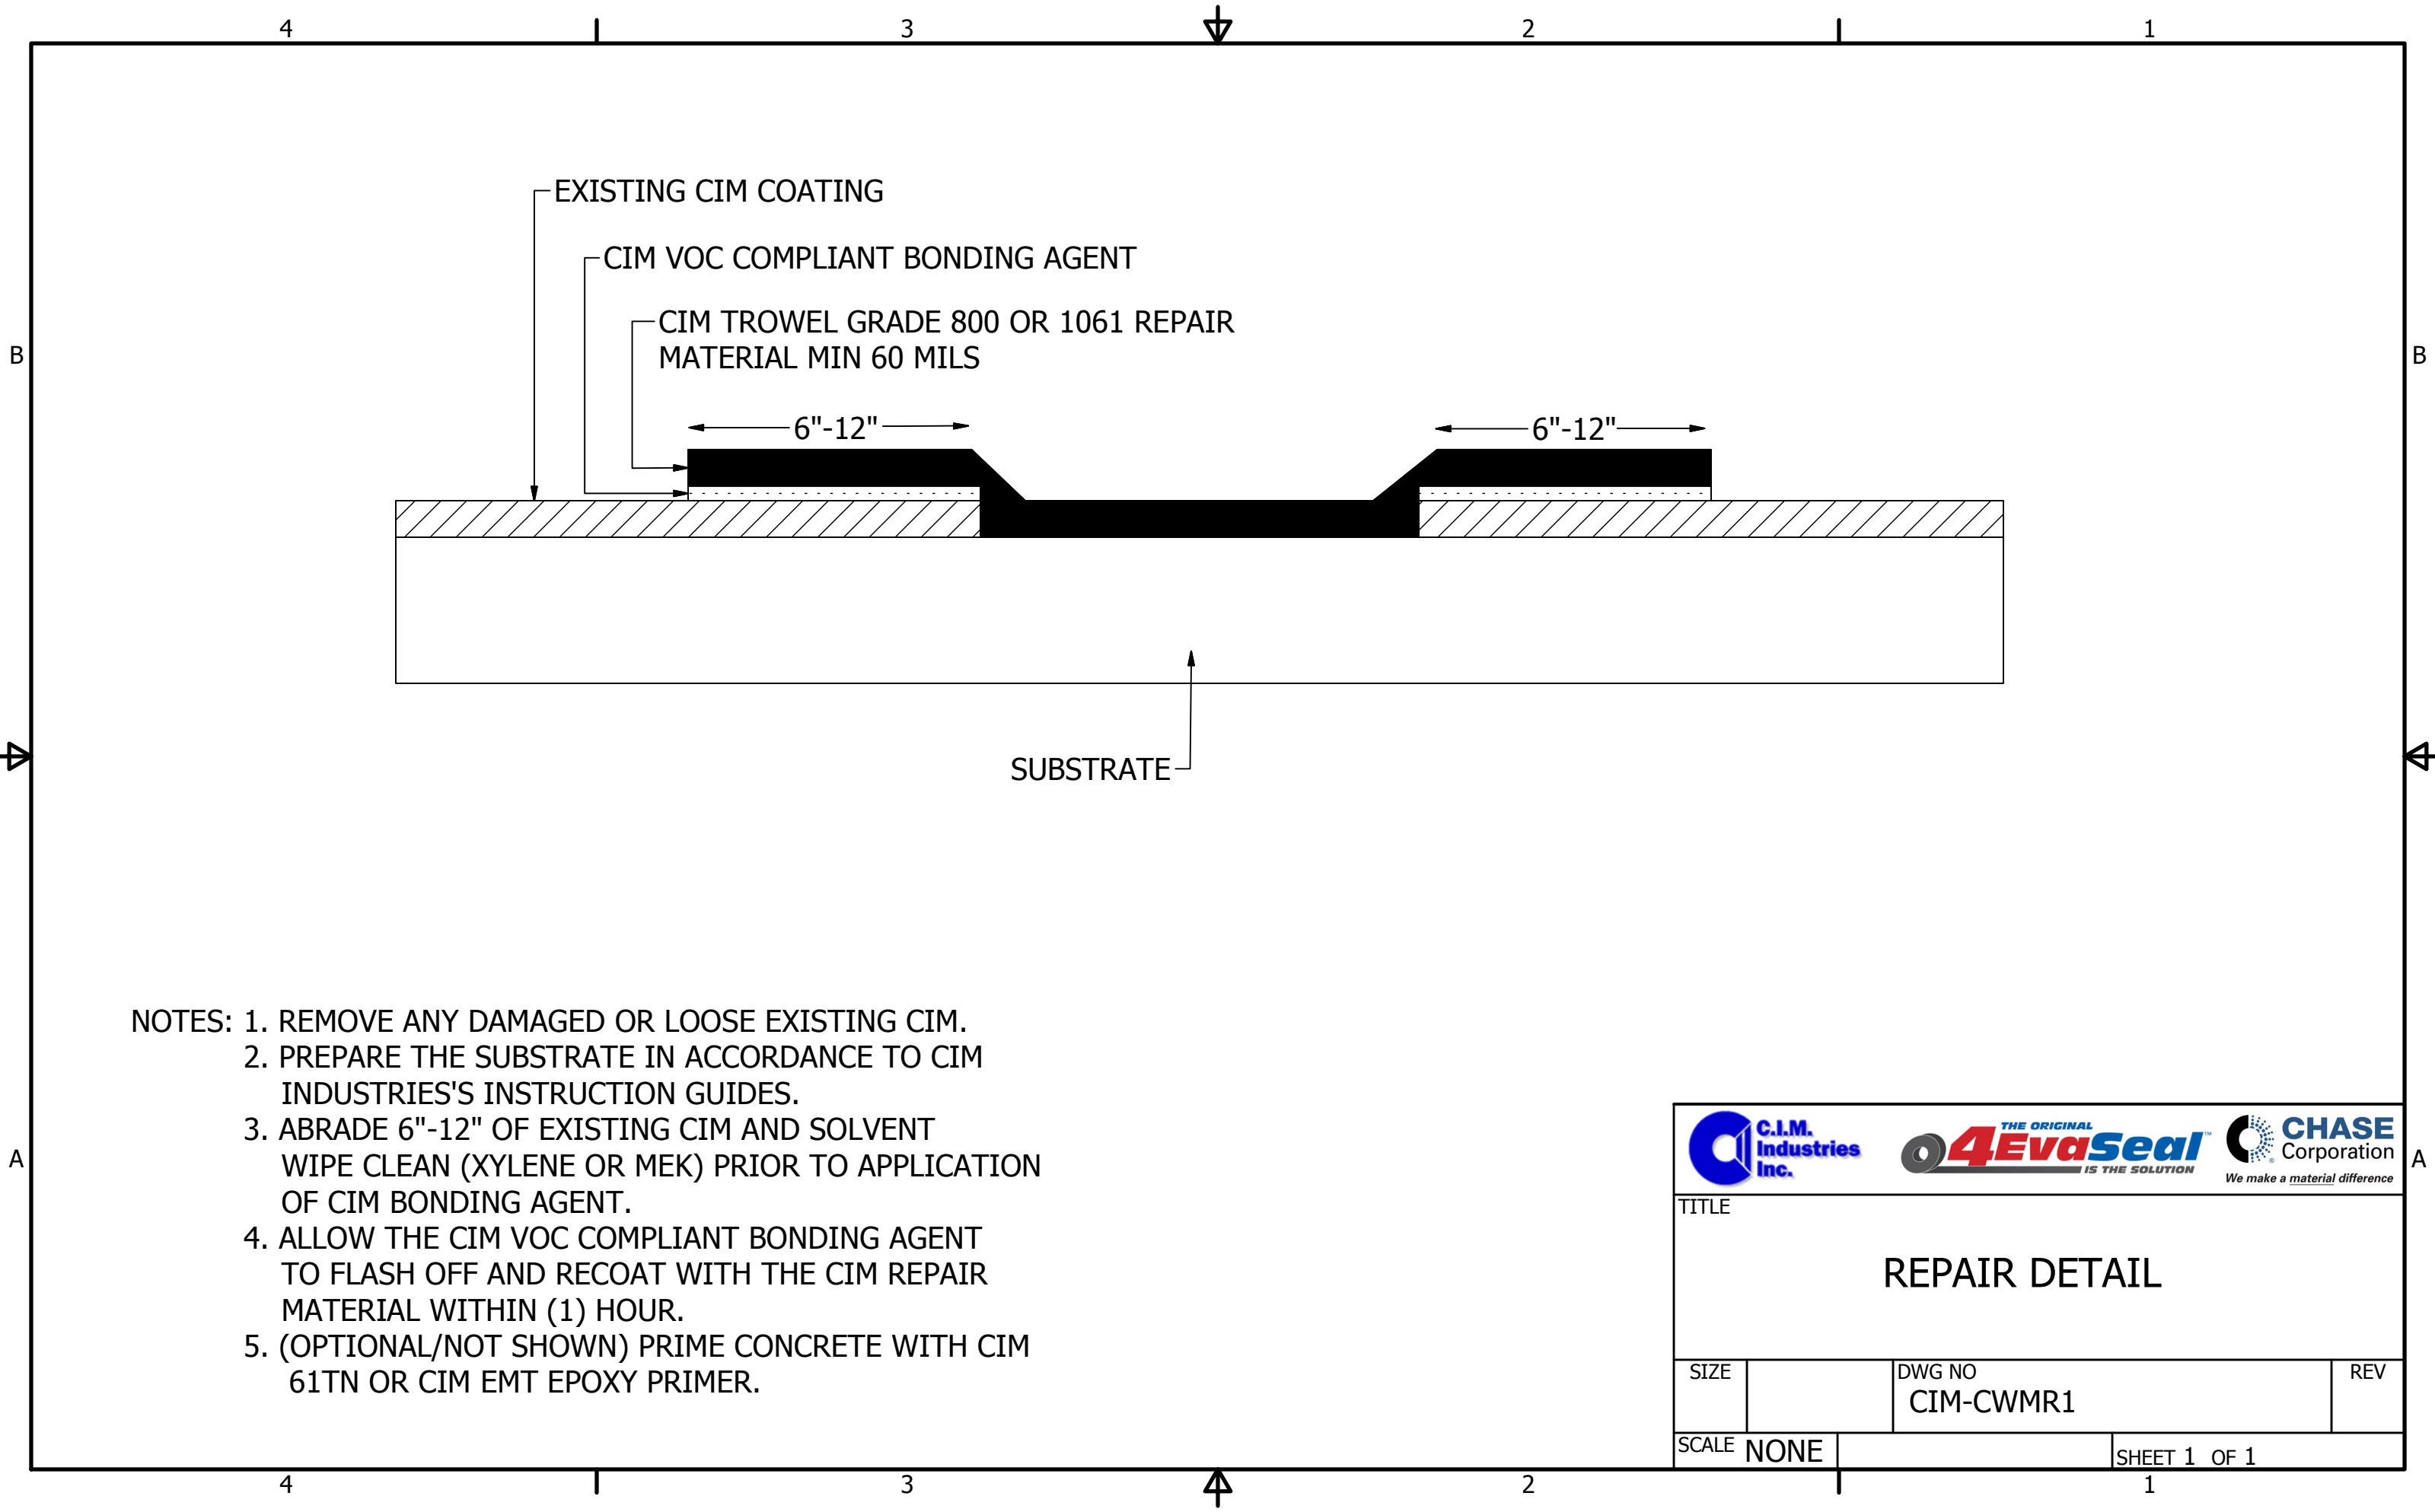

- NOTES:
- 1. REMOVE ANY DAMAGED OR LOOSE EXISTING CIM.
 - 2. PREPARE THE SUBSTRATE IN ACCORDANCE TO CIM INDUSTRIES'S INSTRUCTION GUIDES.
 - 3. ABRADE 6"-12" OF EXISTING CIM AND SOLVENT WIPE CLEAN (XYLENE OR MEK) PRIOR TO APPLICATION OF CIM BONDING AGENT.
 - 4. ALLOW THE CIM VOC COMPLIANT BONDING AGENT TO FLASH OFF AND RECOAT WITH THE CIM REPAIR MATERIAL WITHIN (1) HOUR.
 - 5. (OPTIONAL/NOT SHOWN) PRIME CONCRETE WITH CIM 61TN OR CIM EMT EPOXY PRIMER.



TITLE			
REPAIR DETAIL			
SIZE		DWG NO	REV
		CIM-CWMR1	
SCALE		SHEET 1 OF 1	
NONE			